



2-slice toaster

instruction and recipe booklet

STYLE #18010

table of contents

Important Safeguards	2
Other Consumer Safety Information	4
Parts & Features	6
Assembly & Use	7
Care & Cleaning	9
Warranty & Customer Service.....	10
A Note from Food Network	11
Recipes	12
Notes	15

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including:

1. READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the toaster.
3. Do not touch hot surface. Use handles or knobs only.
4. To protect against electrical shock, do not immerse cord, plug or any part of the toaster in water or any other liquid.
5. Close supervision is necessary when it is used by or near children.
6. NOT RECOMMENDED FOR USE BY CHILDREN.
7. Unplug the unit from the outlet when not in use and before cleaning. Allow to cool before putting on or removing parts.
8. Do not operate any appliance with a damaged cord or plug or after the appliance malfunctions or has been damaged in any manner. Return to a qualified service facility for examination, repair or adjustment. DO NOT ATTEMPT TO REPAIR THE UNIT YOURSELF - THIS WILL VOID THE WARRANTY.
9. Do not let the cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot gas or electric burner, or in a heated oven.
11. Do not use the appliance for other than its intended use.
12. Oversized food, metal foil packages or utensils must not be inserted in the toaster, as they may cause fire or electric shock.
13. A fire may occur if toasters are covered or touching flammable material, including curtains, draperies, walls, etc., when in operation.
14. The use of any accessory attachments not recommended by the appliance manufacturer may result in fire, electric shock or personal injuries.
15. Do not attempt to dislodge food when the toaster is in operation.
16. Be sure to take the bread out carefully after toasting to avoid injury.
17. To disconnect, make sure that the toaster is not in operation, then remove plug from wall outlet.

18. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.

19. Use the appliance on a level and stable surface.

20. Do not use outdoors.

SAVE THESE INSTRUCTIONS FOR HOUSEHOLD USE ONLY

other consumer safety information


This appliance is intended for indoor household use only. No user-serviceable parts inside. Power Unit never needs lubrication. Do not attempt to service this product.

Line Cord Safety Tips

1. Never pull or yank on cord or appliance.
2. To insert plug, grasp it firmly and guide it into outlet.
3. To disconnect appliance, grasp plug and remove it from outlet.
4. Before each use, inspect the line cord for cuts and/or abrasion marks. If any are found, this indicates that the appliance should be serviced and the line cord replaced.
5. Never wrap the cord tightly around the appliance, as this could place undue stress on the cord where it enters the appliance and cause it to fray and break.

Polarized Plug

This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way.

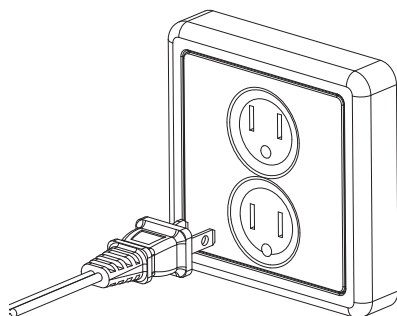

FCC Warning:


WARNING: Changes or modifications to this unit not expressly approved by the party responsible for compliance could avoid the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits of a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

parts & features

1. Heating Elements
2. Lever
3. Control Panel
4. Crumb Tray
5. Browning Control Knob

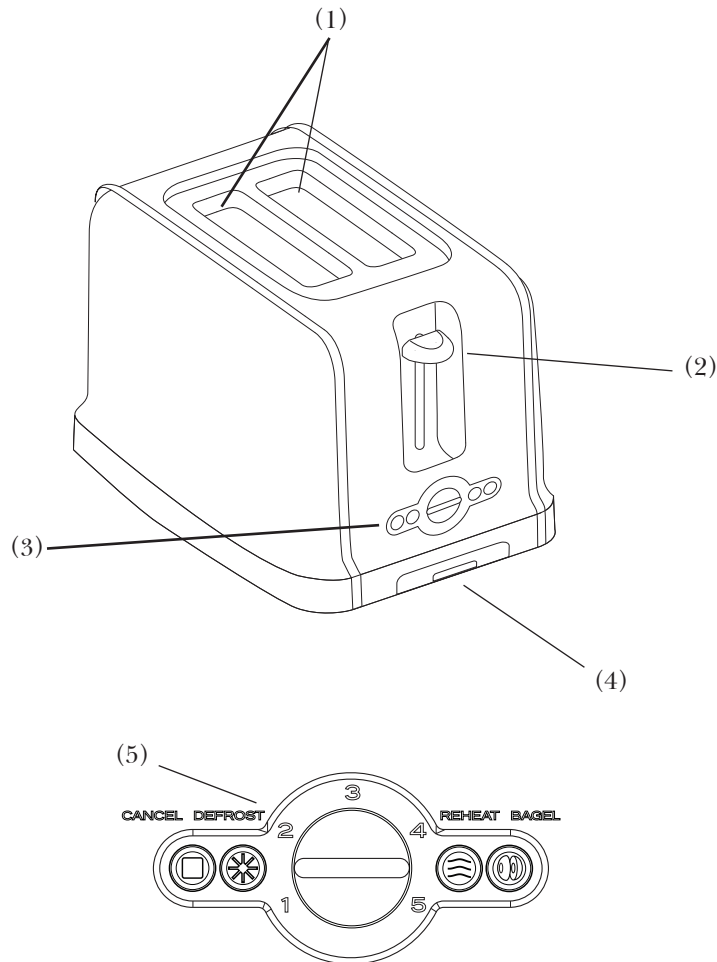

assembly & use

There may be manufacturing residue or oil remaining in the toaster or heating element, it may emit an odor the first time you use it. This is normal. For first use, it is suggested to operate according to the following steps, except without bread. Then let the toaster cool down and begin toasting the first slice.

1. Put slice of bread into the bread slot.

Note: Make sure the crumb tray is correctly positioned before using.

2. Plug the power cord into the outlet.
3. Set the browning control knob to your desired level. There are 5 position levels, the lowest is set to light and the highest is dark. Position 3 of the control knob can toast bread to a golden color.

Note: Toasting one slice of bread will result in a darker color than when toasting two slices at the same time.

4. Press lever down vertically until it is positioned in place and toasting will begin at once.

Note: Toasting process can be terminated at any time by pressing the CANCEL button. Only when the power supply is on can the lever rest at the bottom of slot.

5. During the toasting process, you can observe the toasting color. If it is to your satisfaction, you can press the CANCEL button to cancel the operation at any time.
6. Once the bread has been toasted to the preset color, the lever will automatically spring up.
7. If the bread has been taken out from the refrigerator, press the lever down vertically until it is positioned in place. Press the DEFROST button and the light beside it will be illuminated. In this mode, it will be toasted to your desired level.
8. If you want to reheat bread, press the lever down vertically until it is positioned in place. Press the REHEAT button and the light beside it will be illuminated. In this mode, toasting time is fixed; the lever will automatically spring up and end the reheating process.

9. If you only want to toast one side of the bread slice, set the browning control knob to your desired color and press the lever down vertically until it is positioned in place. Press the BAGEL button and the light beside it will be illuminated. In this mode, only the outer heating elements are in operation – the middle heating element is not – so the bagel or bread must be inserted correctly to toast the proper side. Once the bread has been toasted to the preset color, the lever will automatically spring up and end the heating process.

CAUTION: If the toaster starts to smoke, Press CANCEL to stop toasting immediately.

CAUTION: Remove all protective wrapping prior to using the toaster.

CAUTION: Avoid toasting food with extremely runny ingredients such as butter.

CAUTION: Never attempt to remove bread jammed in the slots without unplugging the toaster from the electrical outlet first. Be sure not to damage the internal mechanism or heating elements while removing bread.

CAUTION: The bread slot should only be used for toasting sliced bread and bagels.

care & cleaning

1. Disconnect from the outlet before cleaning.
2. To avoid injury, wipe the outside with a soft, dry cloth after toaster cools down, never use metal polish.
3. If the toaster is used frequently, accumulated bread crumbs should be removed at least once a week. Make sure the crumb tray is completely closed before using the toaster again. Crumb tray is top rack dishwasher-safe.
4. When not in use or in storage, the power cord may be wound underneath the toaster.

warranty & customer service

What does your warranty cover? Any defect in material or workmanship.

For how long after the original purchase? Two years.

What will we do? Provide you with a new one.

How do you make a warranty claim?

- Save your receipt.
- Properly pack your unit. We recommend using the original carton and packing materials.
- Return the product to your nearest Kohl's store or call Customer Assistance at 1-877-342-4337 (1-877-34-CHEFS).

What is not covered by your warranty?

- Parts subject to wear, including, without limitation, glass parts, glass containers, cutter/strainer, blades, seals, gaskets, clutches, motor brushes, and/or agitators, etc.
- Commercial use or any other use not found in printed directions.
- Damage from misuse, abuse, or neglect, including failure to clean product regularly in accordance with manufacturer's instructions.

How does state law relate to this warranty?

- This warranty gives you specific legal rights, and you may also have other rights which vary from state to state or province to province.
- This warranty is in lieu of any other warranty or condition, whether express or implied, written or oral, including, without limitation, any statutory warranty or condition of merchantability or fitness for a particular purpose.
- Kohl's, Food Network and the product manufacturer expressly disclaim all responsibility for special, incidental and consequential damages or losses caused by use of this appliance. Any liability is expressly limited to an amount equal to the purchase price paid whether a claim, however instituted, is based on contract, indemnity, warranty, tort (including negligence), strict liability, or otherwise. Some states or provinces do not allow this exclusion or limitation of incidental or consequential losses so the foregoing disclaimer may not apply to you.

If you have a claim under this warranty, please call our Customer Assistance number. For faster service, please have the model, type and series numbers ready for the operator to assist you. These numbers can be found on the bottom of your appliance.



This toaster was designed for cooks, by cooks. We took all the features we loved from all the toasters we've used over the years and put them together to make this one. We love it, and we hope you will too.

The extra-wide slots and bagel button on the toaster mean it works perfectly for bagels or English muffins -- but the simplest, quickest breakfast we know is toast. Keep your bread either at room-temperature (if you go through a lot of it) or in the freezer (if you don't).

And, of course, nothing makes for good toast like good bread. What is good bread? It should have character, crust, and color, and smell yeasty and inviting. If you've got a bakery nearby, check out their bread, or try those "freshly baked" breads at the grocery store.

Some toppings we love on toast:

- Butter, jam, honey, cinnamon sugar
- Peanut or other nut butters (like almond or soy)
- Chocolate spreads (chocolate-hazelnut is a classic, but there are a number of different kinds out there)
- Cream cheese and hot pepper jelly
- Good-quality cheese: sharp cheddar, fresh goat cheese, creamy blue cheese, Parmesan, and Brie, or whatever your cheese store has that looks delicious.
- Sliced avocados and black pepper
- Store-bought pesto or tapenade
- Thin slices of good ham or prosciutto or smoked fish

We didn't think you needed a recipe for toast. So instead, the recipes on the next few pages are for things you put on toast. They'll put you well on the way to toast success.

chicken salad sandwiches

- 1½ cups cooked, shredded chicken meat
- “Something crunchy” (1 rib celery,
1 small apple, ½ fennel bulb,
3 to 5 radishes, or ½ cup sweet or
dill pickle slices)
- “Something oniony” (¼ small red onion,
2 scallions (white and green parts),
or 1 large shallot)
- ½ cup mayonnaise
- Kosher salt and freshly ground black pepper
- 8 slices bread

1. Put chicken in a large bowl. Chop the “something crunchy” and “something oniony” and add to chicken. Add mayonnaise, salt and pepper, and stir until evenly coated.

2. Toast bread and assemble sandwiches.

Makes 4 servings.



blueberry maple syrup

- 1 cup blueberries
- ¼ cup maple syrup
- 1 cinnamon stick
- 1 tablespoon unsalted butter
- 1 teaspoon lemon juice

1. Toss blueberries with maple syrup in a small saucepan.
2. Add cinnamon stick and cook over high heat, stirring occasionally, until boiling and blueberries burst, 5 minutes.
3. Remove from the heat, discard cinnamon stick, stir in the butter and lemon juice.
4. Serve warm.

Makes 1 cup.

Cook's note: This is great on your favorite toaster waffles.

tomato caper cream cheese spread

- 1 plum tomato, stemmed and seeded
- 8 ounces cream cheese, room temperature
- ¼ cup fresh parsley leaves
- 1 scallion (white and green parts)
- 1 tablespoon capers, drained
- Zest of half a lemon
- ½ teaspoon kosher salt
- Freshly ground black pepper, to taste

Pulse ingredients together in a food processor. Spread over toasted bagels and serve.

Makes about 1½ cups.

Cook's note: Try this on a toasted bagel or black bread.



egg salad sandwiches

- 5 large eggs
- “Something crunchy” (1 rib celery,
1 small apple, ½ fennel bulb,
3 to 5 radishes, or ½ cup sweet or
dill pickle slices)
- “Something oniony” (¼ small red onion,
2 scallions (white and green parts),
or 1 large shallot)
- ½ cup mayonnaise
- Kosher salt and freshly ground black pepper,
to taste
- 8 slices bread

1. Put eggs in a saucepan with cold water to cover. Bring to a boil, cover, and remove from the heat; set aside for 10 minutes. Drain, peel and coarsely chop the eggs. Put in a bowl.
2. While the eggs cook, chop the “something crunchy” and “something oniony” and add to eggs. Add mayonnaise, salt and pepper, and stir until evenly coated.
3. Toast bread and assemble sandwiches.

Variations: Add thick sliced tomatoes and lettuce to the sandwiches. Stir in 2 tablespoons freshly chopped herbs, such as parsley or basil or 2 tablespoons whole grain mustard, to the salads.

Stir 2 teaspoons curry powder, ½ cup chopped fresh cilantro and ¼ cup golden raisins into the mix.

Makes 4 servings.



poached eggs

1½ tablespoons light-colored vinegar,
such as white, rice, cider or white wine

2 large eggs

Kosher salt and freshly ground black pepper,
to taste

Toast

1. Fill a small nonstick skillet with about 2 inches of water. Bring water to the barest simmer over medium-low heat. Add vinegar.
2. To make sure the yolk doesn't break; gently crack an egg into a cup. Turn the cup, gently slipping egg into the water. Repeat with other egg. Cook until whites set but yolks are still runny, about 4 minutes per egg. Lift eggs from the water with a slotted spoon and blot on paper towels. Transfer to a plate; season with salt and pepper. Serve with toast.

Makes 2 servings.



nutty spiced butter spread

2 sticks unsalted butter

½ cup pecan pieces

¼ cup light brown sugar

1 teaspoon cinnamon

½ teaspoon allspice

½ teaspoon finely grated orange zest

Pulse ingredients together in a food processor. Serve.

Makes 1 cup.

Cook's Note: This a perfect topper for whole wheat toast.

notes

[illegible]



food
network

Nice Choice. With thousands of cooking shows under our belts and countless products and recipes tested, we know how to create great stuff for the kitchen. Your instincts were right. This one's a keeper.

For ideas and inspiration, watch Food Network and visit us at FoodNetwork.com.

Shop kohls.com/foodnetwork for more great products.